



Warranty

This is a high-quality product. It has been designed and manufactured by top professionals using high-quality materials. These products are transported in purpose-made chests that provide maximum protection for our products. Nevertheless, the objects remain vulnerable. They have to be treated with care.

Upon delivery, you sign for a product that meets expectations 100%. After that, you can no longer derive any rights from the warranty in terms of damage. We will only process complaints in relation to inferior quality.

GENERAL

1. The warranty starts on the day of delivery to the first owner, or no more than 30 days after delivery by ICONIC.

2. Claims under the ICONIC warranty must be submitted within the warranty period.

3. The warranty relates to the item of furniture; if it is transferred to another party, it will not change the application of the warranty.

4. Minor repairs on-site after a period of use of more than three years will be subject to call-out charges.

5. Assessments of claims under our warranty scheme after a period of use of more than five years are subject to call-out charges.

EXCLUSIONS

1. Normal wear and tear and damage are not covered by the warranty.

Damage as a result of improper use or improper maintenance is excluded from the warranty.
Repairs to upholstery and furniture carried out without the written consent of ICONIC will render the warranty invalid.

4. Indirect losses as a result of any defect, such as loss of income etc. are also excluded from the guarantee.

⁵. In order to be able to comply with service requests, the product must be located within the operational area of the ICONIC sales organisation through which the product was sold. If this is not the case, ICONIC will not carry out any inspections or repairs.

6. As a result of the design and selected comfort, creases in upholstery are unavoidable. No complaints can be made about this.

7. No complaints can be submitted about changes to the nap of velvet (or velvety) fabrics which have occurred during use. The resulting differences in colour are optical differences and are among the specific characteristics of these types of fabrics.

Sizes 1300 l x 950 b x 200 h mm 440 l x 450 b x 370 h mm

aBt!001 - Table low silver dish



The silver-plated dish - approx. 1904/1906

This silver-plated dish bearing the Marples & Co silver hallmark was made in the early 1900's and was used as a dinner dish at the time. It was used to serve food. Marples & Co as a silver hallmark can be seen on Buckle, cigar case, creamer, cup holder, mustard, napkin ring, salt, sugar basin. Marples & Co was a wholly owned subsidiary of Martin, Hall & Co in Ludgate Hill, Birmingham.

More information can be found on www.silvermakersmarks.co.uk

Maintenance silver-plated dish

Cover the bottom of the tray with aluminium foil. Make sure the bottom is fully covered. Now pour warm water into the tray. Use enough water for the cutlery or other silver items to be fully submerged. Add baking powder to the warm water and wait for the reaction to subside. Now put the cutlery in the tray. Make sure that it is fully submerged and that it touches the aluminium foil (very important!). Wait five to ten minutes before removing the cutlery from the tray. Don't use your bare hands, as the cutlery may be very warm. Lay it out on a piece of kitchen towel and wipe dry properly. Don't be afraid to use some force. The surface of your cutlery is full of small holes, and these will more or less be filled again if you use some force. Your silver cutlery will be nice and shiny again. Instead of baking powder, you can also use washing soda, which is more effective. The baking powder allows the reaction to continue quicker and acts as a catalyst.

Maintenance - low side table

The table can be cleaned with a soft, dry (micro-fibre) cloth.